



Instruction Manual



40" Full HD 1080P LED TV

40LED01

CONTENTS

Important Safety Instructions	2
Safety Information	3
Preparation	4
What is Included	4
Front View	5
Rear View	6
Installing the Stand	7
Removing the Stand for Wall-Mounting	7
Wall-Mounting Screws	7
Remote Control	8
Connecting External Devices	10
Basic Operations	11
First Time Installation	11
Quick Settings	13
Picture	14
Sound	16
Channel	18
EPG	21
Nextwork	24
Time	25
System	27
Movies	30
Music	31
Photos	32
Sources	33
CI (Common Interface)(DTV mode)	34
Parental Control	35
Troubleshooting	36
Maintaining	38
Plug Replacement-UK	38
Specification	39
Disposal Information	39

IMPORTANT SAFETY INSTRUCTIONS

- **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- **Follow all instructions** – All operating and use instructions should be followed.
- **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well-ventilated environment.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing. Objects filled with liquids, such as vases should not be placed on apparatus.
- **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- **WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- **WARNING:** To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



HDMI®

HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc in the United States and other countries.

SAFETY INFORMATION



This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health.

Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly.

WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.

To ensure reliable and safe operation of this equipment, please carefully read all the instructions in this user guide, especially the safety information below.

Electrical Safety

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on any connecting wire, which may damage the wire.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm, or when not using the television for extended period of time, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. Do NOT use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid is spilled onto the set, if the TV set accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the TV set does not work normally.
- Do not remove the safety covers. There are no user-serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Qualified personnel must only service this apparatus.
- To avoid a battery leakage, remove batteries from the remote control, when the remote is not use for long period, or when the batteries are exhausted.
- Do not break open or throw exhausted batteries into a fire.
- For best results, use type AAA (example-alkaline, carbon-zinc, etc.) batteries.
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Do not attempt to recharge disposable batteries.
- Do not short circuit battery terminals.
- Keep away from children.

Physical Safety

 
- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around.
- Do not tap or shake the TV screen, or you may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required if the apparatus does not operate normally or if the apparatus, including the power supply cord or plug, has been damaged in any way.
- Servicing is also required if liquid has been spilled, or objects have fallen into the apparatus; when the apparatus has been exposed to rain or moisture; or if the apparatus has been dropped.

PREPARATION


What is Included




TV Set

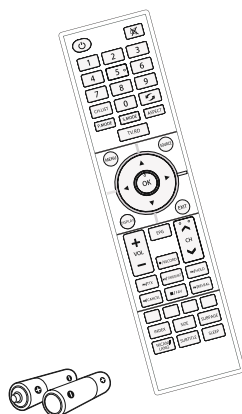


Remote Control with Batteries

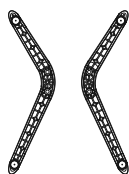 


Base Stand

 


Screws x4

 


MINI AV cable

 

MINI YPBPR cable

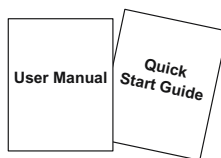 


User Manual &
Quick Start Guide

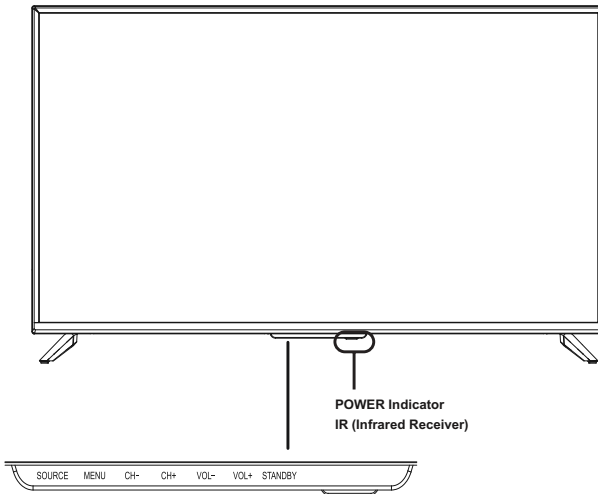 Front View

- **VOL +/- button**
Press to adjust the volume.
- **CH ^/~ button**
Press to select the channel.
- **Menu button**
Display the main menu.
- **Source button**
Press to select among different input signal sources.
- **STANDBY button**
Switch the TV between On/Standby mode.
- **POWER Indicator**
Illuminate blue when the TV is turned on. Illuminate red when the TV is in standby mode.
- **IR (Infrared Receiver)**
Receive IR signals from the remote control.


PREPARATION

 Rear View

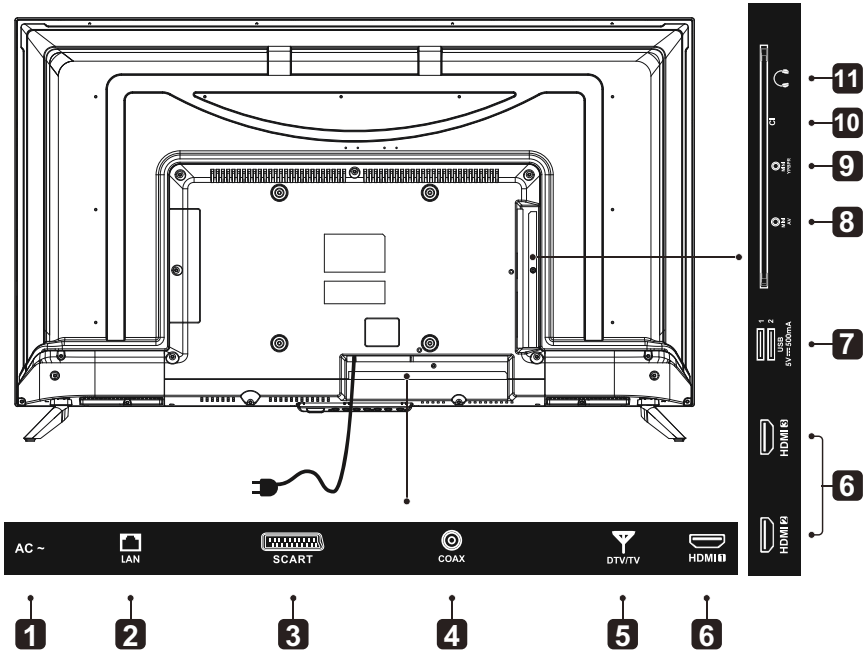


- 1. **Power Cord**
Connect to AC power outlet.
- 2. **LAN**
Network connection port.
- 3. **SCART Socket**
Connect to SCART cable between the SCART socket on the TV and the SCART socket on the external device.
- 4. **COAX**
Connect a digital sound system to this jack.
- 5. **DTV/TV Input**
Connect to the antenna (75Ω VHF/UHF) socket with the RF coaxial cable.
- 6. **HDMI Input**
Connect to a High-Definition (HD) signal output device.
- 7. **USB Input**
Connect to a USB storage device to play photo files. (USB mode)
- 8. **MINI AV**
Connect to the composite VIDEO and AUDIO (L/R) output sockets on external video devices.
- 9. **MINI YPBPR**
Connect to AV devices with component (Y/Pb/Pr) video and audio output sockets. COMPONENT&VIDEO share with AUDIO IN(L/R)subscribe to.
- 10. **CI Slot**
Used to insert a CI card. A CI card allows you to view all the channels that you subscribe to.
- 11. **Headphone Socket**
Connect to the Headphones.

 Installing the Stand

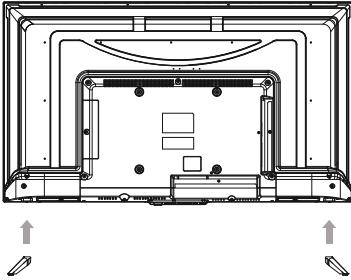

1. Lay the TV face-down on a flat, cushioned surface to avoid damaging or scratching.
2. Fix the stand assembly to the TV using the 4 pcs provided screws.

 Removing the Stand for Wall-Mouting

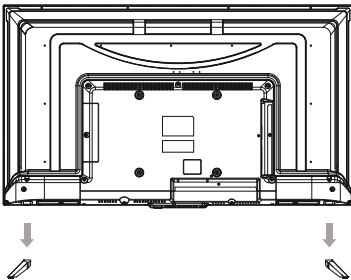

1. Lay the TV face-down on a flat, cushioned surface to avoid damaging or scratching.
2. Untighten the 4 pcs screws holding the stand assembly and remove them.
3. Attach the wall-mount bracket to the TV using the mounting holes on the back of the TV. Mount this TV according to the instructions included in the wall-mount bracket.

Wall-Mounting Screws

- Mount the VESA bracket using 4*M6*10 isometric threaded screws (not included).
- WARNING: To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instruction.

 
WARNING:

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Attention should be drawn to the environmental aspects of battery disposal.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Remote Control

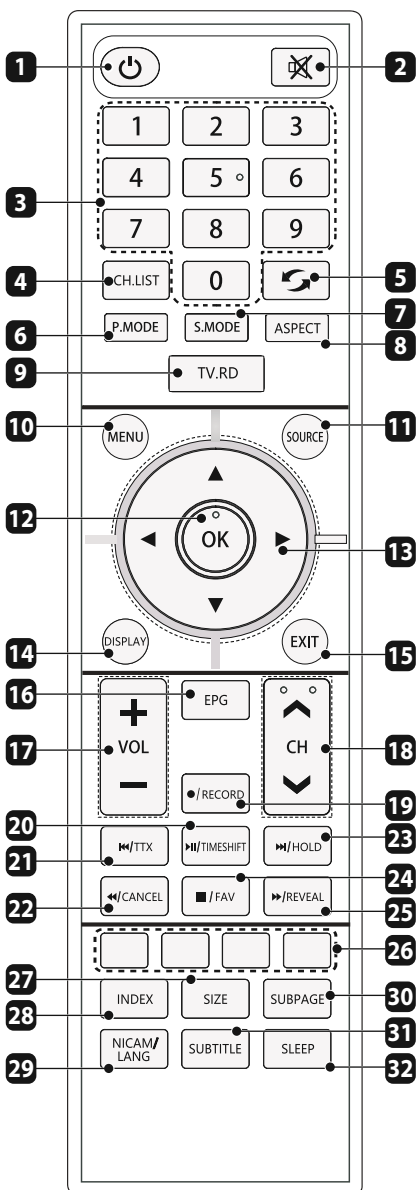


1. : Switch the TV between and standby mode.
2. : Mute and restore your TV sound.
3. **0~9**: Select a program.(ATV/DTV mode).
4. **CH.LIST**: Display channel list.(ATV/DTV mode).
5. : Return to previous viewing channel.
6. **P.MODE** : Select picture mode: standard/ mild/ personal/ dynamic.
7. **S.MODE** : Select sound mode: standard/ music/ movie / personal.
8. **ASPECT**: Select from the following mode settings: 16:9/Zoom1/Zoom2/ Auto/4:3.
9. **TV.RD**: Select TV program or Radio program.(DTV mode).
10. **MENU**: Display the OSD(on screen display) menu.
11. **SOURCE**: Select among the different input signal sources:Antenna/Cable/ Satellite/ATV/AV/YPbPr/HDMI/PC/ Media Player.
12. **OK**: Confirm the selection in the OSD(on screen display) menus.
13. : Allows you to navigate the OSD menus and adjust the system setting to your preference.
14. **DISPLAY**: Display the present screen information such as the current channel and the input source .
15. **EXIT**: Exit the OSD menu.
16. **EPG**: Display the EPG(Electronic Program Guide).(DTV mode).
17. **VOL +/-**: Adjust the volume.
18. **CH +/-**: Select a channel.
19. : Record the current programme. (DTV mode)
20. : To start or pause the timeshift playback.(DTV mode). To start playback or pause.(USB mode). **TIMESHIFT**: Start the time-shift function. (DTV mode).

Remote Control

21. **⏮** : To skip to the beginning of the previous chapter/track/photo.(USB mode).
TTX : Turn on and off the Teletext function.(ATV/DTV/AV/YPBPR mode).
22. **⏪** : To reverse playback rapidly.(USB/DTV mode).
CANCEL : To cancel the teletext mode.(ATV/DTV/AV/YPBPR mode).
23. **⏭** : To skip to the beginning of the next chapter/track/photo.(USB mode).
HOLD : Freezes a multi-page passage on screen in teletext.(ATV/DTV/AV/YPBPR mode).
24. **■** : Press to stop the playback, the time shift or the recording.(USB/DTV mode).
FAV : Display the Favourite Channel list.(ATV/DTV mode).
25. **⏩** : To advance playback rapidly.(USB/DTV mode).
REVEAL : Reveals hidden information such as the answer to a quiz in teletext.(ATV/DTV/AV/YPBPR mode).
- 26.**COLOUR BUTTON**:Access to corresponding function in APP service.(ATV/DTV/AV/YPBPR mode)
- 27.**SIZE** : To enlarge the picture on the TV in teletext.(ATV/DTV/AV/YPBPR mode).
- 28.**INDEX** : To select the page number of the index from teletext.(ATV/DTV/AV/YPBPR mode).
- 29.**NICAM** : Switch between different audio channels.(only applicable when the TV programme has this feature).
LANG : Select DTV audio language.(DTV mode).
- 30.**SUBPAGE** : Switch between different audio channels.(ATV/DTV/AV/YPBPR mode).
- 31.**SUBTITLE** : Display the subtitle which is broadcast with the program.(DTV mode).
- 32.**SLEEP** : Set the TV sleep timer.

 CONNECTING EXTERNAL DEVICES

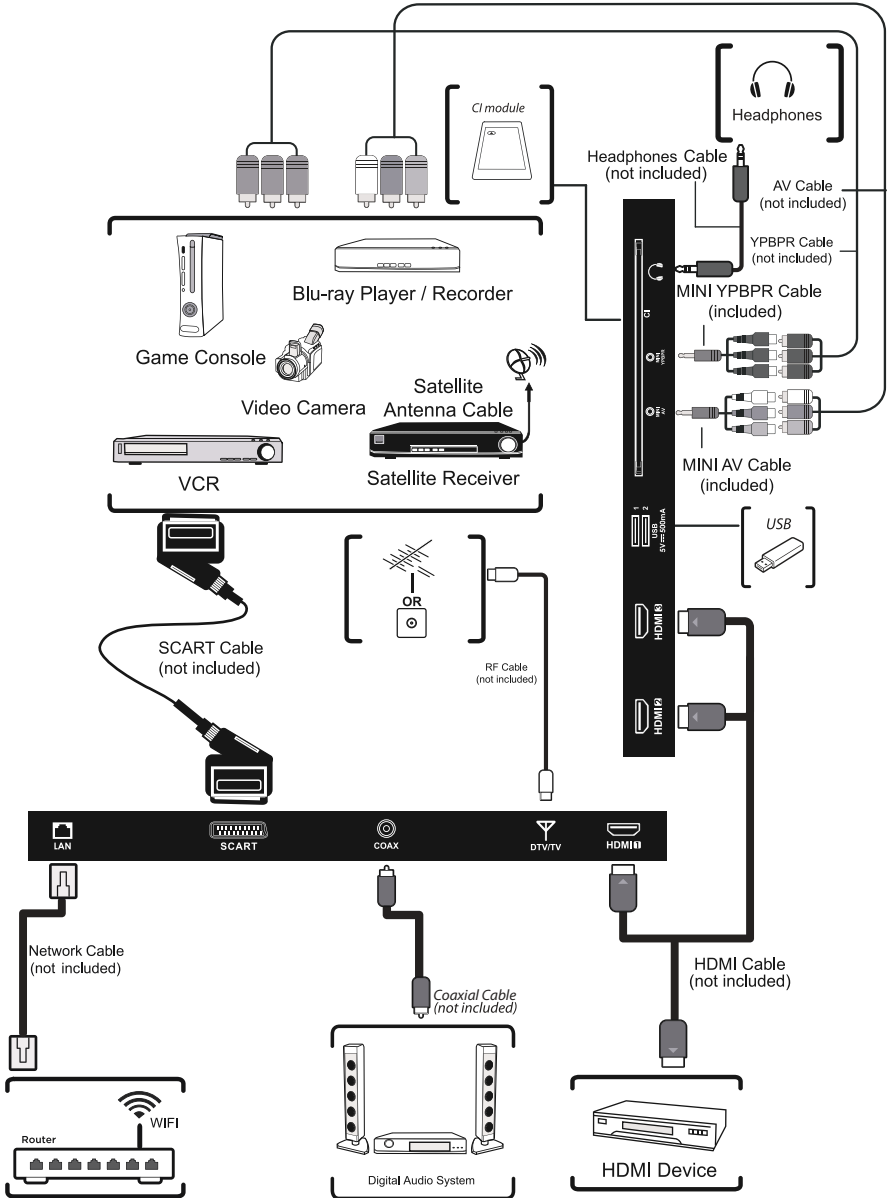

BASIC OPERATIONS

First Time Installation

Connect an RF cable from the Tv's input called "RF-In" and to your TV Aerial socket
Press **OK** button to select the Start Setting.



Press [▼] / [▲] / [◀] / [▶] button to select the language.
Press **OK** button to sure.



Press [▼] / [▲] / [◀] / [▶] button to select the country.
Press **OK** button to sure.



BASIC OPERATION

 
Press **【◀】 / 【▶】** button to select the environment.
Press **OK** button to sure.



Press **【▼】 / 【▲】 / 【◀】 / 【▶】** button to select the default source.
Press **OK** button to sure.




Press **OK** button to into home page.

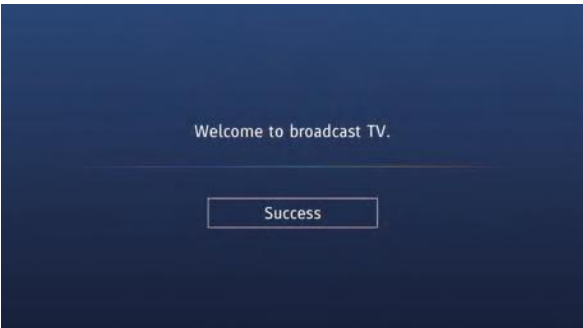

Quick Settings

Press 【◀】 / 【▶】 button to select Quick Settings .

 Press **OK** to enter setting.

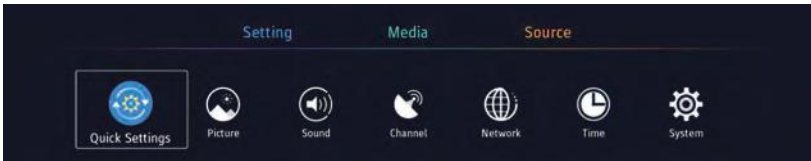

1. Press 【▼】 / 【▲】 to select: Audio Language/Subtitle Language/Record List/Event List.

2. Press **OK** to adjust or select.



Audio Language

Select the audio language.

Subtitle Language

Select the subtitle language.

Record List

View the program list you have record.

 
Event List

View the event list that you have make an appointment to record.

Picture

Press [◀] / [▶] button to select PICTURE .

Press **OK** to enter setting.

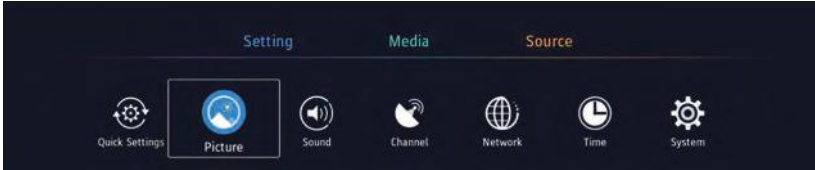

1. Press [▼] / [▲] to select: Picture Mode/ Aspect Ratio/ Advanced Settings
2. Press [◀] / [▶] to adjust or select.



Picture Mode

Press [▼] / [▲] button to select Picture Mode, then press [◀] / [▶] button to select. (Optional:Standard /Personal/ Dynamic/ Movie/ Economy)

- Standard** The default mode, to make users experience high-quality images under normal light.
- Personal** Personal-defined picture settings.
- Dynamic** Image colors more beautiful, more vivid picture.
- Movie** This mode is more suitable for watching movies.
- Economy** Reduce screen brightness, improved contrast for energy saving.

(NOTE:The Brightness/ Contrast/ Colour/ Tint / Sharpness/ Backlight function could be adjusted only in Personal picture mode.)



Aspect Ratio

Select the picture size: Auto/ 16:9/ 4:3/ Zoom1/ Zoom2

Advanced Settings

Select the settings: OverScan/ Colour Temperature/ Dynamic Contrast/ Noise Reduction.



Over Scan

Select ON/OFF.

Colour Temperature

Select to adjust the overall color of the image: Standard/ Cold/ Warm

Dynamic Contrast

Select to adjust image contrast: ON/OFF.

Noise Reduction

Select to eliminate image noise intensity: Off/ Low/ Medium/ High

Sound

Press [◀] / [▶] button to select SOUND.

Press **OK** to enter setting.



1. Press [▼] / [▲] to select: Sound Mode/ Surround Sound/ Speaker/ AVC/ Advanced Settings

2. Press [◀] / [▶] to adjust or select.



Sound Mode

Press [◀] / [▶] button to select **Sound Mode**, then press [◀] / [▶] button to select. (Optional: Standard/ Music/ Sport/ Movie/ Personal).

- Standard** Produces a balanced sound in all environments.
- Music** Preserves the original sound.Good for musical programs.
- Sports** Enhances vocals for TV audio.
- Movie** Enhances treble and bass for a rich sound experience.
- Personal** Select to customize picture settings.

Surround Sound

Set the Surround Sound control. Select ON/OFF.

Speaker

Set the Audio Out/ Digital Audio Delay.



Digital Audio Output Select PCM/ RAW/ Off.

Digital Audio Delay Adjust the delay time.

 
Lip Sync Adjust the Lip Sync.

AVC

Press **【▼】** / **【▲】** button to select AVC, then press **【◀】** / **【▶】** button to choose ON/OFF.
 (NOTE: After opening the AVC, Once the volume is set, regardless of any difference TV Version printed on each channel, it can make the speaker volume remained stable.)

Advanced Settings

Select the settings: Balance/ Equalizer

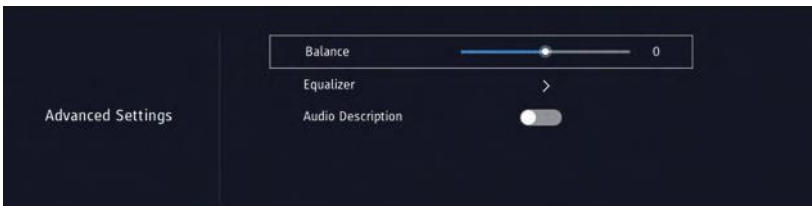

Balance Adjust the balance of left and right channel output.

 
Equalizer Adjust the equalizer.

Audio Description Select description On/Off.

Channel

Press [◀] / [▶] button to select Channel.

Press **OK** to enter setting.

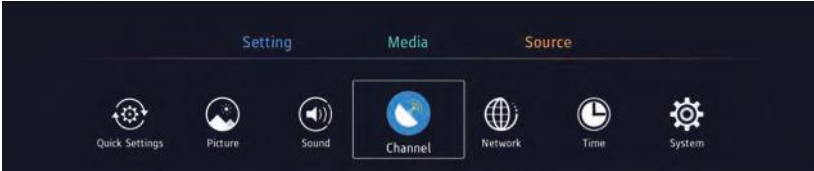


1. Press [▼] / [▲] to select: DVB Antenna/Auto Scan/Digital Manual Scan/CAM Setting/Signal Information.
2. Press [◀] / [▶] to adjust or select.



Auto Scan

Press [▼] / [▲] button to select Auto Scan, press **OK** to search program automatically.

 
Analogue

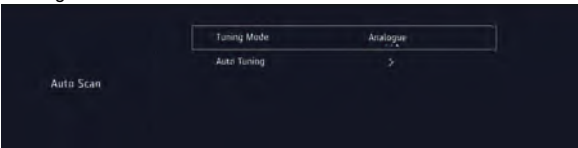

Digital



 Digital+Analogue

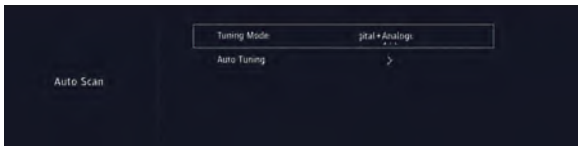


Digital Manual Scan

Press [▼] / [▲] button to select Digital Manual Scan.



ATV Manual Scan

 Press [▼] / [▲] button to select Analog Manual Scan.

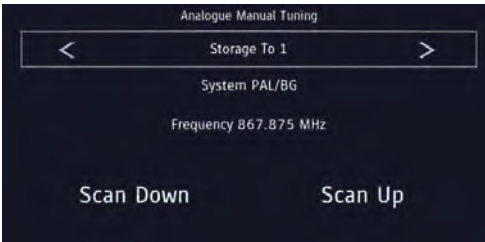


Signal Information

Press [▼] / [▲] button to view the signal information.



Channel List

 
Press [▼] / [▲] button to enter channel List.

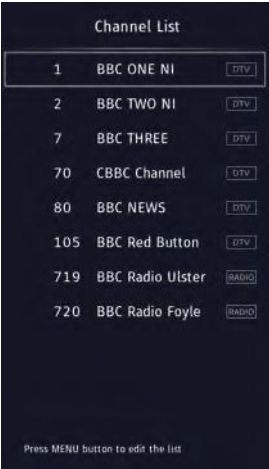

Press ▼ / ▲ to highlight the channel you want to select.
(Optional: Lock/FAV/Delete.)

EPG

 Press [□] / [●] button to enter record.

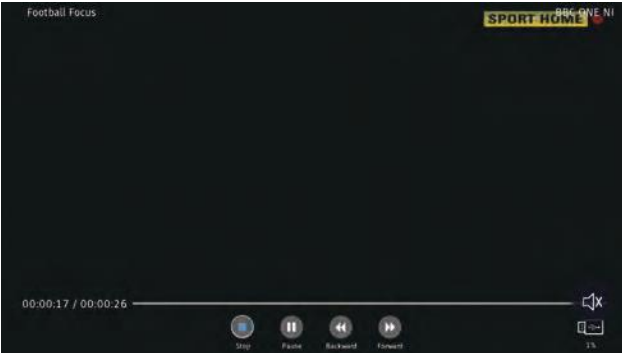

Press to stop recording and playing.



Press to pause recording.



 
Press to play backward.



Press to play forward.


EPG

Press EPG button to enter setting.

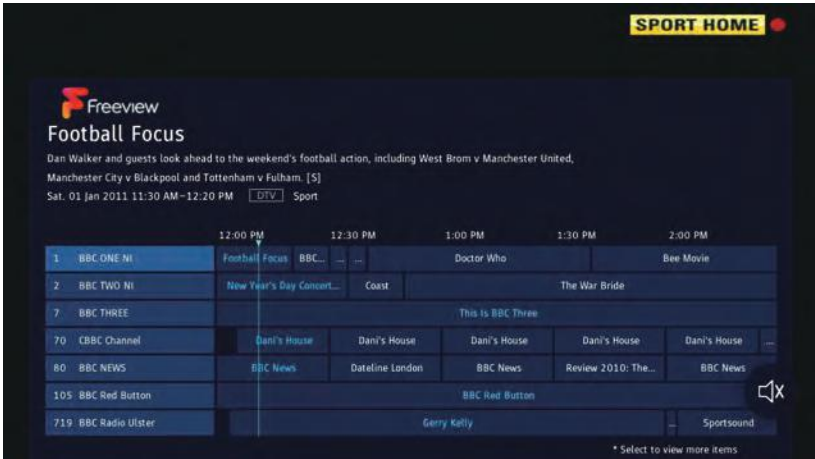

Info

 View the information of the program.

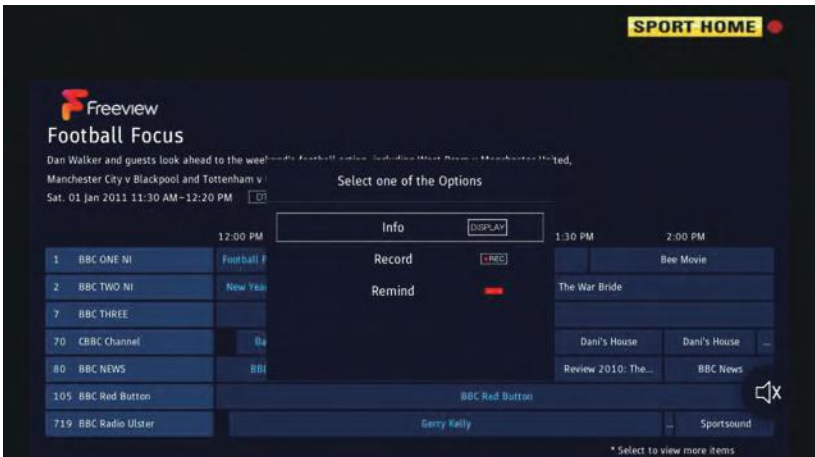

Record

Set an appointment to record the program automatically.

 


Press the **Record Time** to set the time to record automatically.



Remind

Set an appointment to remind you the program automatically.

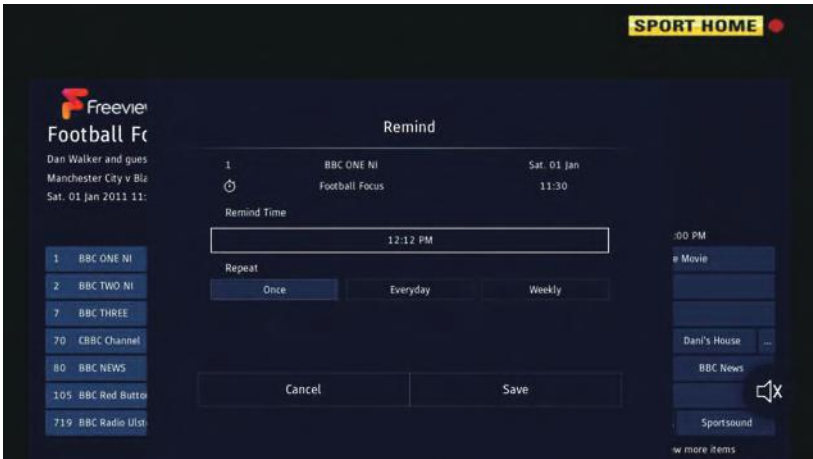

Press the **Remind Time** to set the time to remind you automatically.



Network

Press [◀] / [▶] button to select Network.
Press **OK** to enter setting.

 


- 1. Press [▼] / [▲] to select: Cable/ Network Test
- 2. Press [◀] / [▶] to adjust or select.



Time

Press [◀] / [▶] button to select Time.
Press **OK** to enter setting.

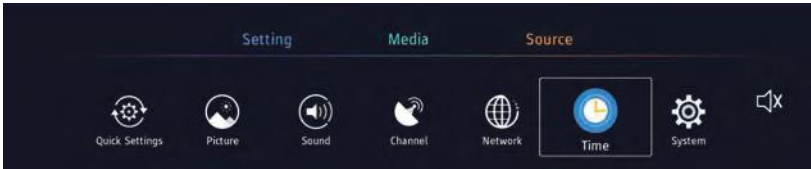

1. Press [▼] / [▲] to select: Time/ On Time/ Off Time/ Sleep Timer/ OSD Timer/ Auto Standby.
2. Press [◀] / [▶] to adjust or select.



Time

Set the current time.

On Time

Set the default setting when turn on the TV automatically.



- On Time** Set the time to turn on the TV automatically.
- Input Source** Set the default source when turning on the TV automatically.
- Channel** Set the Channel when turning on the TV automatically.
- Volume** Set the default volume when turning on the TV automatically.

Off Time

Set the time to turn off the TV automatically.

Sleep Timer

Set the time to turn off the TV automatically without any operation in some time.

(Optional: Off/ 10 Min/ 20 Min/ 30 Min/ 60 Min/ 90 Min/ 120 Min/ 180 Min/ 240 Min)

OSD Timer

Set the OSD show time.

(Optional: Never/ 5 S/ 10 S/ 15 S/ 20 S/ 30 S/ 60 S/ 180 S)

 
Auto Standby

Set the standby time.


(Optional: Off/ 3 H/4 H/ 5 H)

System

Press [◀] / [▶] button to select System.
Press **OK** to enter setting.

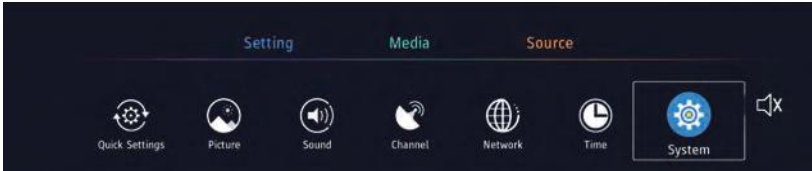

 1. Press [▼] / [▲] to select: Country/ Language/ Lock/ HDMI LNK/ Advanced Settings
2. Press [◀] / [▶] to adjust or select.

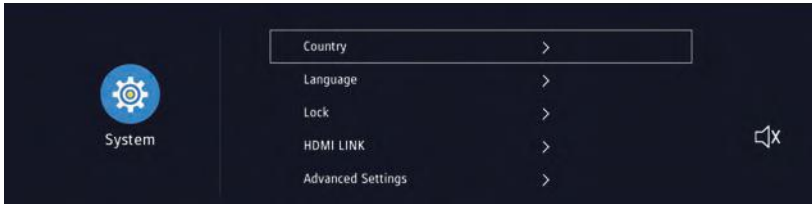

Country

Select the country.

Language

Select the menu language.

Lock

Select to lock/unlock the TV.

HDMI LINK

Select ON/OFF the HDMI LINK function.

Advanced Settings



PVR&Time-Shift Settings

PVR&Time-shift Settings .

Hearing Impaired

Select on or off the hearing impaired.

Blue Screen

Select ON/OFF the blue screen.

Setup Wizard

Select to enter the FTI.(Show in page 1)

Entertainment

 
Select on or off the entertainment on/off.

Restore to Default

Select to restore factory default.


Media

Press **【INPUT】** to enter input source, and press **【◀】 / 【▶】** button to select **Media**.

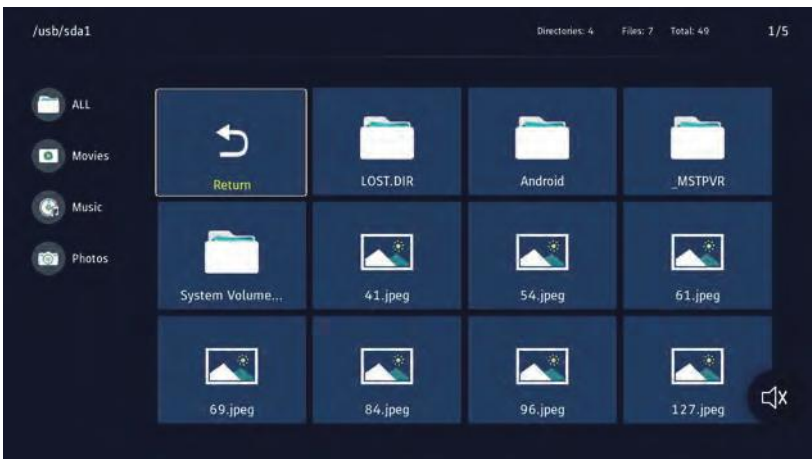

Movies

 Press ▼ / ▲ to select Movies.

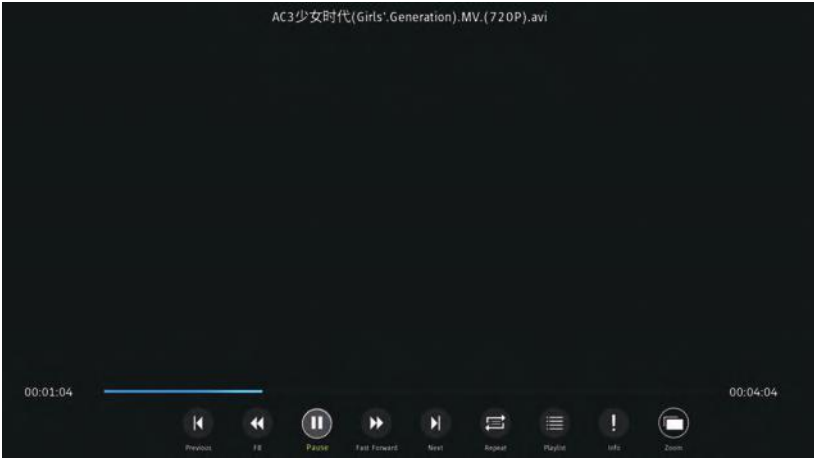

Press to play previous movie.



Press to play fast backward.



Press to stop/play the movie.



Press to play fast forward.



Press to play next movie.



Press to repeat the movie.



Press to view the play list of the movie.



 
Press to view the information of the movie.



Press to select Auto/4:3/16:9.

Music

Press ▼ / ▲ to select Music.

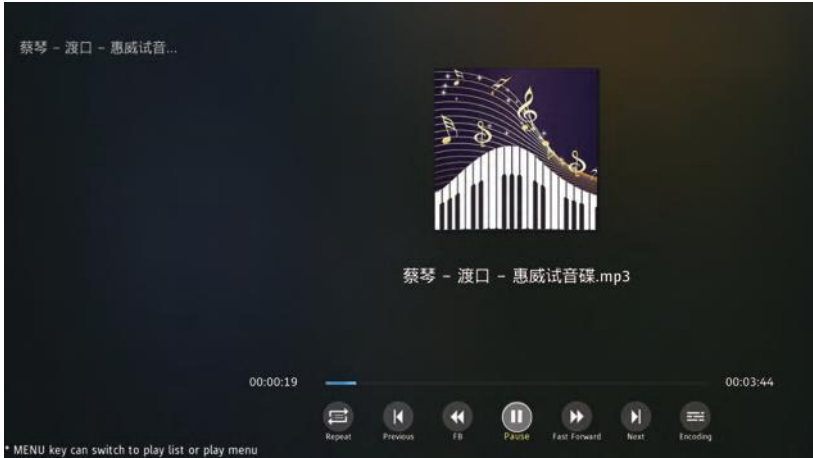

Press to repeat the music.



Press to play previous music.



Press to play fast backward.



Press to stop/play the music.



Press to play fast forward.



Press to play next music.



Press to encode the music.

Photos

Press ▼ / ▲ to select Photos.



Press to play previous picture.



Press to rotate anticlockwise the picture.



Press to stop/play the picture.



Press to rotate clockwise the picture.



Press to play next picture.



Press to repeat the picture.



Press to view the play list of the picture.



Press to view the information of the picture.

Sources

Press [◀] / [▶] button to select Source in HOME page.
Press **OK** to enter setting.



 
CI (Common Interface)(DTV mode)

NOTE: this function is available only when the Common Access Module is inserted to the CI slot.

This function allows you to view the common interface module information.

- Use the ▲/▼ button to select CI Information from the menu then press the OK button to enter.
- Press the ▲/▼ buttons to select the items and press the **OK** button to confirm.

The common interface allows the use of a Common Access Module to enable you to unscramble (pay to view) services. These services are provided by other service providers than free to view TV channels.

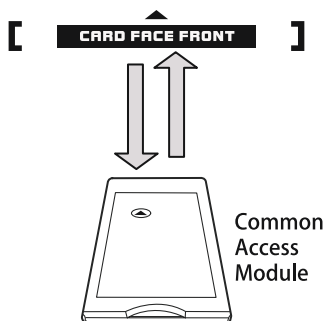

Important: Do not keep removing and refitting the Common Access Module as it could damage the interface and cause a malfunction.

Fitting the Common Access Module

Note: This feature is not available in all countries.

1. Before inserting the Common Access Module, please switch the TV off.
2. If you feel resistance when inserting the CAM, turn it over and try again.
3. Switch the TV on and you will be able to access the encrypted channels from the service provider.

Removing the Common Access Module

1. Before removing the CAM ensure the TV is switched off at the mains.
2. Pull the CAM out of the CI slot in the side of the TV.
3. Switch the TV back on at the mains.

PARENTAL CONTROL

Press the **MENU** button on the main unit or on the remote control and then press the **▲/▼** buttons to select **LOCK** menu. Use the **0-9** buttons to input 4-digit password to enter the **LOCK** menu. If used, this option feature can "block" undesirable programming from appearing on the TV. Parental Control offers the user a wide variety of options and settings that restrict or "block" the programming that can appear on the TV. Parental Control allows the user the capability of defining which program rating they consider acceptable to the younger more sensitive viewer. It can be preset and turned either on or off by the user who specifies the secret 4-number code, the password. The number of hours blocked are specified. General audiences and children blocks should be both programmed into the TV's memory. Viewer ratings are specified for both TV and the motion picture Industry; both rating systems should be used, for complete coverage. The ratings are based on the ages of children.

Overview

To ensure complete coverage for all TV programs, (movies and regular TV shows) choose a rating for MPAA, from the selections below, as well as ratings from the TV Parental Guidelines Rating Systems below, using the Age Block option for General Audiences, and for children. In addition to those, you may wish to add additional restrictions from the content block menu, and submenus examples below.

Things to Consider before Setting up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.) Do you want to block the auxiliary video source entirely? (Blocks the signal sent by the equipment, such as VCR, connected to the TV Audio/Video Input Jacks) Or leave unblocked, then choose allowable ratings. Block program "Content" based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy. Violent Scenes; in Content Blk option. Select a secret password, in the Set Password option, using the numbers keys on the remote control. Do not forget the password, it is the only way you can access the Parental Control menu and change rating selections, or turn Parental Control off. Do you want the Parental Control to be active at all times? If not, you can turn it on or off with the Lock On/Off option.

- You can set different Parental Control viewing restrictions for general audiences and for children, both can be active at the same time.
- Simply specifying one content block such as Sex Scenes, will not automatically restrict the programming that appears from the video sources.
- Even if you choose to leave the AUX Inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources.
- You can not disable Parental Control by disconnecting the TV from power. Block hours will be automatically reset to the original block time setting specified if power is disconnected.

TROUBLESHOOTING

If your TV does not operate normally or cannot be turned on, please check the following troubleshooting questions. Remember also to check any other connected electronic device, such as DVD or Blu-ray player to pinpoint the problem. If the TV still fails to operate normally, please contact technical support.

The TV does not operate properly

The TV does not respond when pressing any buttons	<ul style="list-style-type: none"> The TV may freeze up during use. Disconnect the power cord from the power socket for a few minutes. Reconnect the power cord and try to operate it again as usual.
TV cannot be switched on	<ul style="list-style-type: none"> Check that the TV is connected to the power supply. Make sure all connected AV devices are switched off before switching on your TV.
The remote control does not work	<ul style="list-style-type: none"> Check to see if there are any objects between the TV and the remote control causing an obstruction. Ensure that you are pointing the remote control directly at the TV. Ensure that the batteries are installed with the correct polarity (+ to +, - to -). Install new batteries.
Power is suddenly turned off	<ul style="list-style-type: none"> Check the power of the TV. The power supply maybe interrupted. Check if the sleep timer is set. Check whether the Auto Standby is activated.

The video function does not work

No picture & No Sound	<ul style="list-style-type: none"> Check whether the TV is switched on. Try another channel. The problem may be caused by the broadcaster.
Picture appears slowly after switching on	<ul style="list-style-type: none"> This is normal; the image is muted during the TV startup process. Please contact your service centre if the picture has not appeared after five minutes.
No or poor colour or poor picture	<ul style="list-style-type: none"> Adjust the settings in the PICTURE menu. Try another channel. The problem may be caused by the broadcaster. Check if video cables are connected properly.
Horizontal/Vertical bar or picture shaking	<ul style="list-style-type: none"> Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> The station or cable channel may be experiencing problems; tune to another station. Station signal may be weak, reposition the antenna for better reception. Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> Check antenna (change the position of the antenna.)
No pictures when connecting HDMI	<ul style="list-style-type: none"> Check if the input source is HDMI.
Pictures appear in wrong ratio	<ul style="list-style-type: none"> Adjust the Aspect Ratio settings in the SETUP menu or press the ASPECT button on the remote control.

The audio function does not work

Picture OK but no sound	<ul style="list-style-type: none"> • Press the VOL +/- buttons. • Sound muted? Press the MUTE button. • Try another channel. The problem may be caused by the broadcaster.
No output from one of the speakers	<ul style="list-style-type: none"> • Adjust the Balance settings in the AUDIO menu.
Unusual sound from inside the TV	<ul style="list-style-type: none"> • A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV.
No sound when connecting HDMI	<ul style="list-style-type: none"> • Check if the input source is HDMI.
Audio noise	<ul style="list-style-type: none"> • Keep the RF coaxial cable away from the other connected cables.

Password

Lost password	<ul style="list-style-type: none"> • Select the SET Password setting in the LOCK menu, then enter the following master password "8899". The master password clears your previous password and allows you to enter a new password.
---------------	--

There is a problem in PC mode

The signal is out of range (invalid format)	<ul style="list-style-type: none"> • Adjust the resolution, horizontal frequency, or vertical frequency.
Vertical bar or stripe on background and Horizontal Noise and Incorrect position	<ul style="list-style-type: none"> • Use Auto configures or adjust clock, phase, or H/V position.
Screen colour is unstable or show a single colour	<ul style="list-style-type: none"> • Check the signal cable. • Reinstall the PC video card.

Maintaining

- Do not use your TV in areas that are too hot or too cold, because the cabinet may warp or the screen may malfunction. Your TV works best in temperatures that are comfortable to you.
 - Storage temperatures are 32° to 122°F(0° to 50°C)
 - Working temperatures are 32° to 95°F(0° to 35°C)
 - Do not place your TV in direct sunlight or near a heat source
- minmum 5 cm distances around the apparatus for sufficient ventilation.
-the ventilation should not be impeded by covering the ventilation openings with items,such as newspapers,table-cloths,curtains,ect;
-no naked flame sources,such as lighted candles,should be placed on the apparatus;
-attention should be drawn to the environmental aspects of battery disposal.

Plug replacement-UK

Should you need to replace the plug; the wires in the power cable are coloured in the following way:

Blue – Neutral 'N'

 
Brown – Live 'L'

As the colours of the wires in the power cable may not correspond with the coloured markings identifying the terminals in your plug, and proceed as follows:

The blue wire must be connected to the terminal that is marked with the letter N.

The brown wire must be connected to the terminal that is marked with the letter L.

If the power lead is damaged, it must be replaced by a qualified electrician.

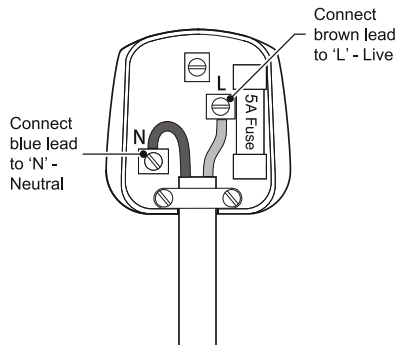

SPECIFICATION

Panel Size	40 inch diagonally
Display Type	LED
Panel Technology	TFT
Panel 60 Hz Vs. 120 Hz	60 Hz
Display Resolution	720P
HDMI Support	Up to 1080P
Panel Resolution	1920 x 1080
Aspect Ratio	16:9
Dynamic Contrast Ratio-Panel	3500~5000:1
Response Time (G To G)	9.5 ms
Lamp Life (Typ. Hours)	>30,000 hours
Horizontal Viewing Angle (At CR>10)	178
Vertical Viewing Angle (At CR>10)	178
Wall-mount(LxW-mm)	200* 200(mm)VESA

Reserve the right to change the parameters without prior notice.

DISPOSAL INFORMATION

Instructions for waste disposal:

Packaging and packaging aids are recyclable and should principally be recycled. Packaging materials, such as foil bag, must be kept away from children.

The cold cathode fluorescent lamp in LCD PANEL contains a small amount of mercury; please follow the local laws or regulations for disposal.

Information for Users on Disposal of old Equipment and Batteries (European Union only)

These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling.

Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.



Product s



Battery

Information for Users in European Union Countries

This symbol on the product or on its packaging means that your electrical and electronic device should be disposed of at the end of its service life separately from your household wastes. There are separate collection systems for recycling in EU.

For more information, please contact the local authority or the dealer where you purchased the product.



We hereby declare that this 40" FHD LED TV is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



www.altimo.co.uk

For customer service call: 0330 041 7490